 
 


Wired Scanner

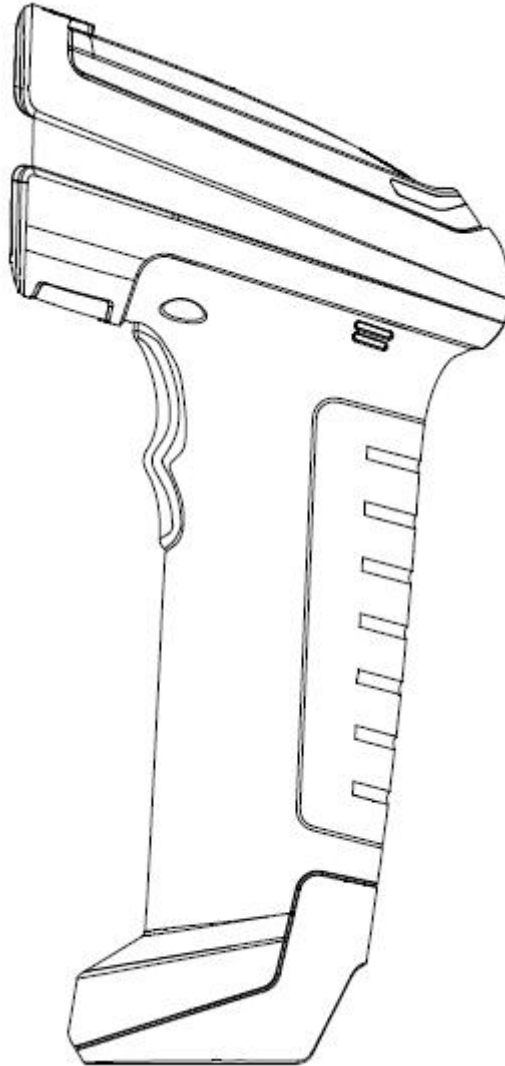

Quick Start Guide V1.0

Scanner Features

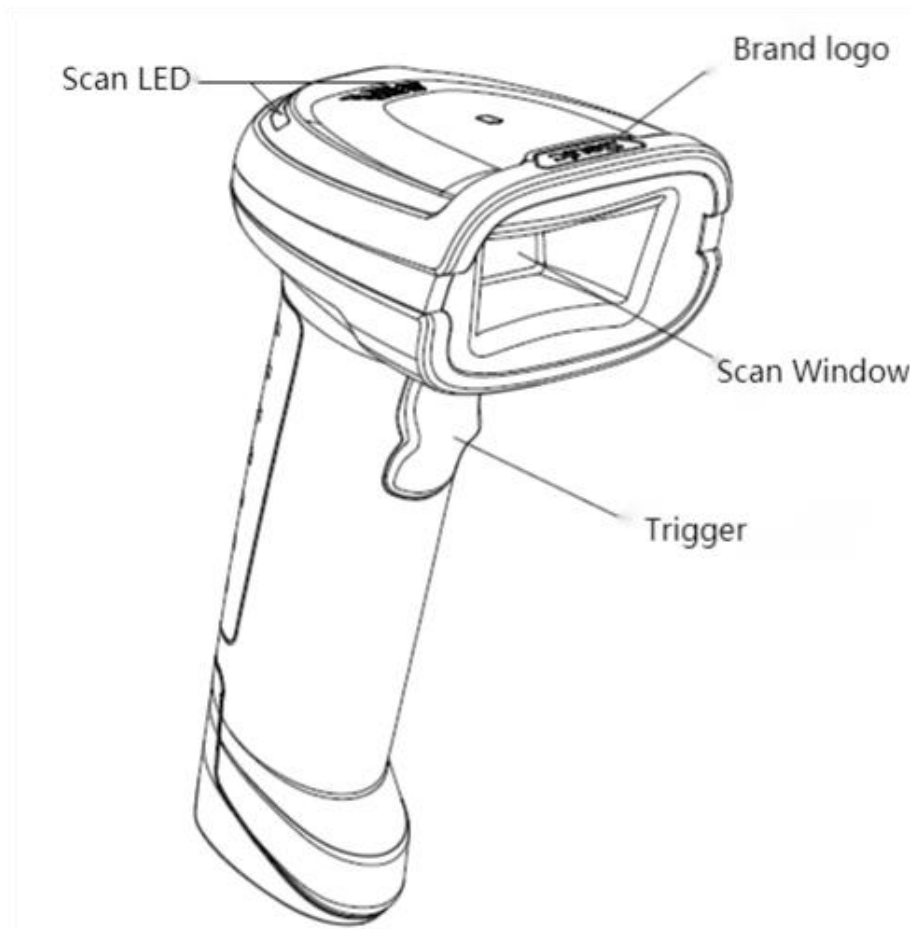

 
LED Indications

 
GREEN LED:Decoding succeeded

RED LED:Decoding failed(off by default)


Aiming - Right/Wrong

Please place the barcode in the aiming frame:

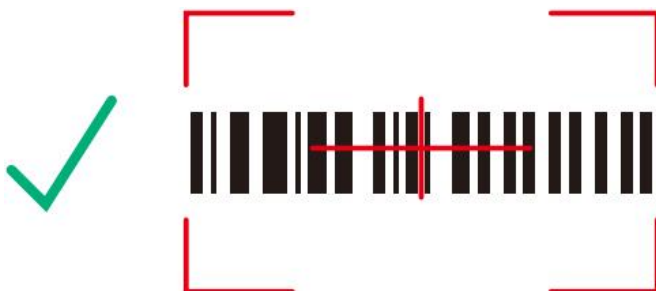

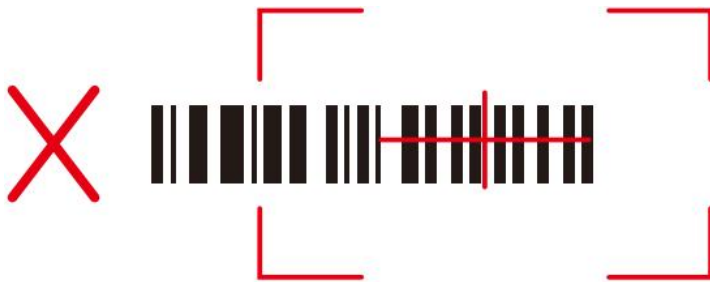

 
When scanning micro barcodes, please shift the aiming frame to the right side of the barcode appropriately:

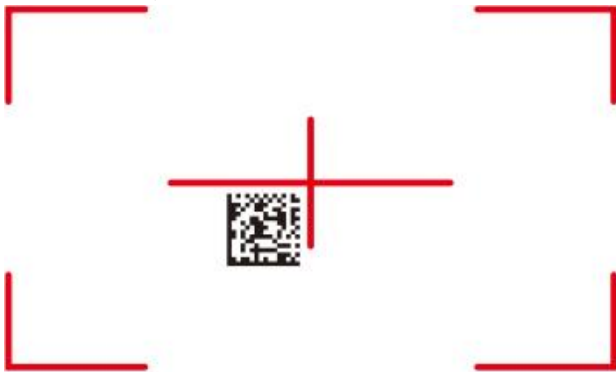

Scanner USB data cable connected to the host diagram


1. Connect the USB cable equipment port with the scan pistol.
2. Connect the other end of the USB cable to the main device.

 Note: The USB communication cable is specially designed, please do not replace it by ordinary USB cable.

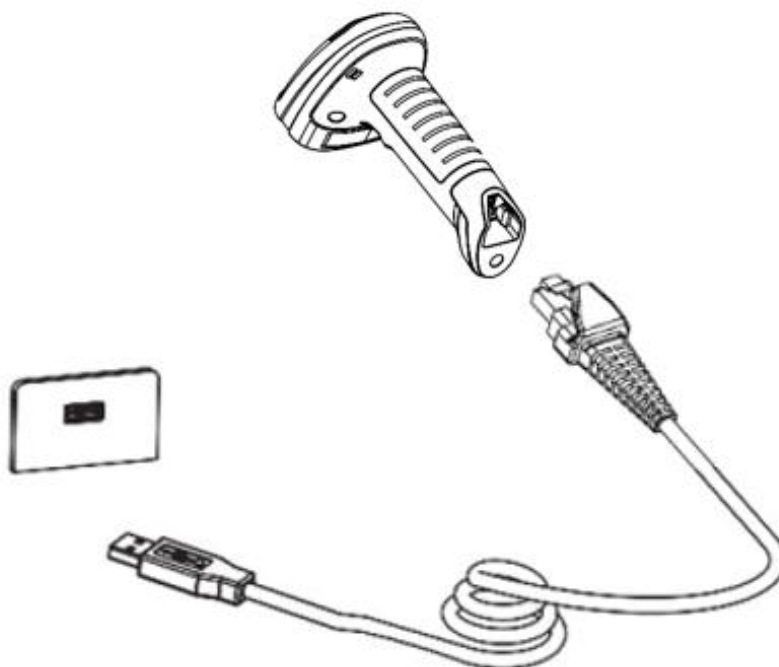

Change the data communication cable

 Press down the buckle to pull out the data cable to replace with USB cable or RS232 communication cable.

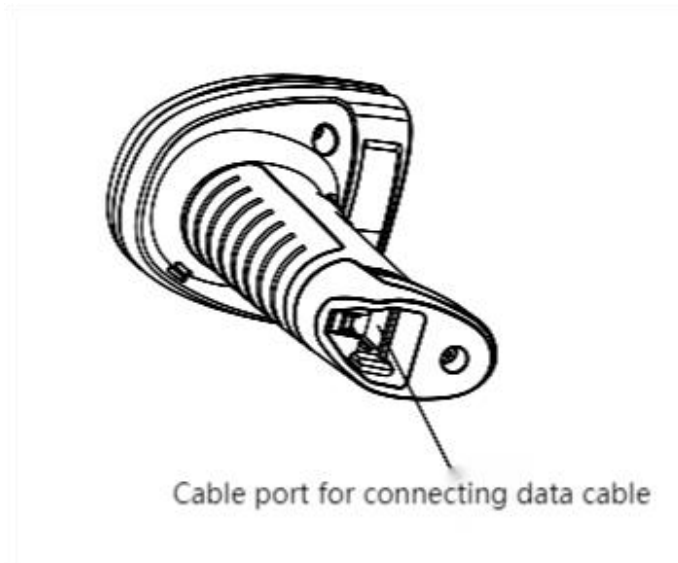

RS232 Serial port connects to main device

1. Connect the RS232 data cable equipment port with the scan pistol.
2. Connect the other end of the RS232 cable to the main device.

Note: The RS232 communication cable is specially designed and it must be connected with the power adapter, please do not replace it by ordinary cable.



Wired Scanner Configuration Setting Codes

1) Restore factory default settings (The USB keyboard interface (HID) is set by default.)



DEFAULTALL

2) Show Product information



Scanner Serial Number Information



Scanner Software Revision

3) Programming the Interface



*USB Keyboard(HID)



USB COM Port Emulation



RS232 Interface

4) RS232 Baud Rate



9600



19200



38400



57600



*115200

5) Add a Carriage Return Suffix to all Symbologies



No CR



*CR Suffix



CR and LF Suffix

6) Set Symbologies On or Off



All 1D Symbologies Off



All 1D Symbologies On



All 2D Symbologies Off



All 2D Symbologies On



All Symbologies Off



All Symbologies On

7) 2D Video Reverse



*2D Video Reverse Off



2D Video Reverse On

8) 1D Video Reverse



*UPC/EAN Video Reverse Off



UPC/EAN Video Reverse On



*Code128 Video Reverse Off



Code128 Video Reverse On



*Code39 Video Reverse Off



Code39 Video Reverse On



*Interleaved 2 of 5 Video Reverse Off



Interleaved 2 of 5 Video Reverse On



*Codabar Video Reverse Off



Codabar Video Reverse On



*Code93 Video Reverse Off



Code93 Video Reverse On

9) Trigger Modes



*Manual Trigger



Continuous Trigger mode



Presentation Mode

10) Multiple Symbols



*Multiple Off



Multiple On

11) Centering



* Centering Off



Centering On

12) Illumination Colors



*Auto switch



White LED Locked



Red LED Locked



Blue LED Locked

13) Pre-Aiming Mode

When this mode is turned on, if the scanner enters the standby state after being turned on, the aiming light enters the continuous on state. It is convenient for users to align the barcode in advance to complete fast and accurate scanning



Pre-Aiming Off



*Aiming light on for 5s



Aiming light on for 10s



Aiming light on for 30s

14) Vibrate setting



*Vibrator Off



Vibrator On

15) Scanning Mode



*DPM Mode



Low Power Mode



Normal Mode

Troubleshooting

| Scanner can not decode the barcode | |
|---|---|
| Corresponding code system is not enabled | Enable the corresponding code system |
| Bar code is unreadable | Ensure the bar code is not defaced; try scanning a test bar code of the same bar code type. |
| Distance between scanner and bar code incorrect | Move scanner closer to, or further from bar code. |
| Power LED | |
| Power LED is off | Check whether the USB cable is tightly and correctly connected |

Precautions for safety

- Do not look directly at the laser scanning head during scanning to avoid accidental injury.
- Please use the battery and power adapter specified by Seuic Technologies Co., Ltd. to prevent explosion or damage to the equipment.
- Do not short-circuit the battery and the power adapter, or touch the battery with metal or other conductive objects.
- Do not immerse the battery in or contact with water or other liquids; do not expose the battery to open flames, sources of explosion, or other hazardous sources such as microwave ovens and dryers.
- Do not immerse the USB cable in water, and keep it away from fire.
- If you suspect that the device or battery is damaged, please contact your supplier for help.

Technical Support

Please visit SEUIC's official website www.chinaautoid.net to download User Manual, SDK, different Apps or software in order to help you better use the device.

2022 SEUIC Company. All rights reserved.

It is strictly prohibited to copy, transfer, distribute and store any content in the document in any form without the SEUIC's permission.

SEUIC Technologies Co., Ltd.

Company address: NO.15 Xinghuo Road, Nanjing New High Technology Industry Development Zone, 210061, Nanjing City, Jiangsu Province, China.

Company official website: www.seuic.com

Product website: www.chinaautoid.net

Mailbox: AUTOID@seuic.com

Postcode:210061

Service Hotline:0086-400-677-0876